




ITT

POSIZIONE BOCCOLE - BEARINGS POSITION

1-3 SV (50-60Hz)

STADI STAGES N°	POSIZIONE DIFFUSORE CON BOCCOLA	NUMERO DIFFUSORI CON BOCCOLA
	DIFFUSER WITH BEARING POSITION	NUMBER OF DIFFUSER WITH BEARING
3	N°2 (2/1)	1
4	N°3 (3/1)	
5	N°4 (4/1)	
6	N°4 (4/2)	
7	N°5 (5/2)	
8	N°6 (6/2)	
9	N°7 (7/2)	
10	N°8 (8/2)	
11	N°3-9 (3/6/2)	2
12	N°3-10 (3/7/2)	
13	N°4-11 (4/7/2)	
14	N°4-12 (4/8/2)	
15	N°4-13 (4/9/2)	
16	N°5-14 (5/9/2)	
17	N°5-15 (5/10/2)	
18	N°6-16 (6/10/2)	
19	N°7-17 (7/10/2)	
20	N°7-18 (7/11/2)	
21	N°5-12-19 (5/7/7/2)	3
22	N°5-12-20 (5/7/8/2)	
23	N°5-13-21 (5/8/8/2)	
24	N°5-13-22 (5/8/9/2)	
25	N°5-14-23 (5/9/9/2)	
26	N°6-15-24 (6/9/9/2)	
27	N°6-15-25 (6/9/10/2)	
28	N°5-12-19-26 (5/7/7/7/2)	4
29	N°5-12-19-27 (5/7/7/8/2)	
30	N°5-12-20-28 (5/7/8/8/2)	
31	N°5-13-21-29 (5/8/8/8/2)	
32	N°5-13-21-30 (5/8/8/9/2)	
33	N°5-13-22-31 (5/8/9/9/2)	
34	N°5-14-23-32 (5/9/9/9/2)	
35	N°6-15-24-33 (6/9/9/9/2)	
36	N°5-12-19-26-34 (5/7/7/7/8/2)	5
37	N°5-12-19-27-35 (5/7/7/8/8/2)	
38	N°5-12-20-28-36 (5/7/8/8/8/2)	

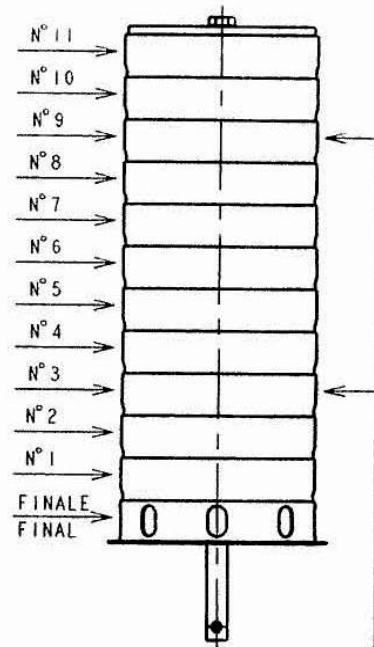

POSIZIONE DIFFUSORI
CON BOCCOLA

DIFFUSERS WITH
BEARING POSITION




ITT

POSIZIONE BOCCOLE - BEARINGS POSITION

5 SV (50-60Hz)

STADI STAGES N°	POSIZIONE DIFFUSORE CON BOCCOLA	NUMERO DIFFUSORI CON BOCCOLA
	DIFFUSER WITH BEARING POSITION	NUMBER OF DIFFUSER WITH BEARING
1-2	N°1 (1/1)	1
3	N°2 (2/1)	
4	N°3 (3/1)	
5	N°4 (4/1)	
6	N°4 (4/2)	
7	N°5 (5/2)	
8	N°6 (6/2)	
9	N°3-7 (3/4/2)	
10	N°3-8 (3/5/2)	
11	N°3-9 (3/6/2)	
12	N°4-10 (4/6/2)	
13	N°4-11 (4/7/2)	
14	N°4-12 (4/8/2)	
15	N°5-13 (5/8/2)	
16	N°5-14 (5/9/2)	
17	N°4-9-15 (4/5/6/2)	3
18	N°4-10-16 (4/6/6/2)	
19	N°4-10-17 (4/6/7/2)	
20	N°5-11-18 (5/6/7/2)	
21	N°5-12-19 (5/7/7/2)	
22	N°5-12-20 (5/7/8/2)	
23	N°4-9-15-21 (4/5/6/6/2)	4
24	N°4-10-16-22 (4/6/6/6/2)	
25	N°4-10-16-23 (4/6/6/7/2)	
26	N°4-10-17-24 (4/6/7/7/2)	
27	N°4-11-18-25 (4/7/7/7/2)	
28	N°5-12-19-26 (5/7/7/7/2)	
29	N°4-9-15-21-27 (4/5/6/6/6/2)	5
30	N°4-10-16-22-28 (4/6/6/6/6/2)	
31	N°4-10-16-22-29 (4/6/6/6/7/2)	
32	N°4-10-16-23-30 (4/6/6/7/7/2)	
33	N°4-10-17-24-31 (4/6/7/7/7/2)	
34	N°4-11-18-25-32 (4/7/7/7/7/2)	

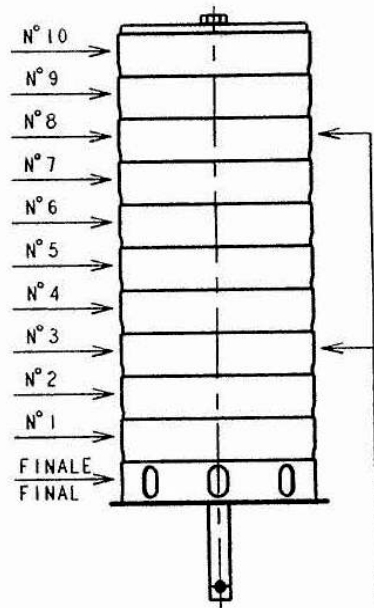

POSIZIONE DIFFUSORI
CON BOCCOLA

DIFFUSERS WITH
BEARING POSITION



ITT

POSIZIONE BOCCOLE - BEARINGS POSITION		
10 SV (50-60Hz)		
STADI STAGES N°	POSIZIONE DIFFUSORE CON BOCCOLA DIFFUSER WITH BEARING POSITION	NUMERO DIFFUSORI CON BOCCOLA NUMBER OF DIFFUSER WITH BEARING
1-2	N°1 (1/1)	1
3	N°2 (2/1)	
4	N°3 (3/1)	
5	N°4 (4/1)	
6	N°4 (4/2)	
7	N°5 (5/2)	
8	N°6 (6/2)	
9	N°7 (7/2)	
10	N°3-8 (3/5/2)	
11	N°3-9 (3/6/2)	
12	N°4-10 (4/6/2)	
13	N°4-11 (4/7/2)	
14	N°4-12 (4/8/2)	
15	N°5-13 (5/8/2)	
16	N°5-14 (5/9/2)	3
17	N°4-9-15 (4/5/6/2)	
18	N°4-10-16 (4/6/6/2)	
19	N°4-10-17 (4/6/7/2)	
20	N°5-11-18 (5/6/7/2)	
21	N°5-12-19 (5/7/7/2)	

N°11 →

N°10 →

N°9 →

N°8 →

N°7 →

N°6 →

N°5 →

N°4 →

N°3 →

N°2 →

N°1 →

FINALE →

FINAL →

POSIZIONE DIFFUSORI CON BOCCOLA
DIFFUSERS WITH BEARING POSITION

POSIZIONE BOCCOLE - BEARINGS POSITION		
15-22 SV (50-60Hz)		
STADI STAGES N°	POSIZIONE DIFFUSORE CON BOCCOLA DIFFUSER WITH BEARING POSITION	NUMERO DIFFUSORI CON BOCCOLA NUMBER OF DIFFUSER WITH BEARING
1-2	N°1 (1/1)	1
3	N°2 (2/1)	
4	N°3 (3/1)	
5	N°4 (4/1)	
6	N°4 (4/2)	
7	N°2-6 (2/4/1)	
8	N°2-7 (2/5/1)	
9	N°3-8 (3/5/1)	
10	N°3-8 (3/5/2)	
11	N°3-9 (3/6/2)	3
12	N°2-6-11 (2/4/5/1)	
13	N°2-6-11 (2/4/5/2)	
14	N°3-7-12 (3/4/5/2)	
15	N°3-8-13 (3/5/5/2)	
16	N°4-9-14 (4/5/5/2)	
17	N°4-9-15 (4/5/6/2)	

N°8 →

N°7 →

N°6 →

N°5 →

N°4 →

N°3 →

N°2 →

N°1 →

FINALE →

FINAL →

POSIZIONE DIFFUSORI CON BOCCOLA
DIFFUSERS WITH BEARING POSITION

